


The parameters are available according to the device model.

Energy balance	Formula
kWh	$(+kWh\ T1) - (-kWh\ T1) + (+kWh\ T2) - (-kWh\ T2)$
kvarh	$(+kvarh\ T1) - (-kvarh\ T1) + (+kvarh\ T2) - (-kvarh\ T2)$

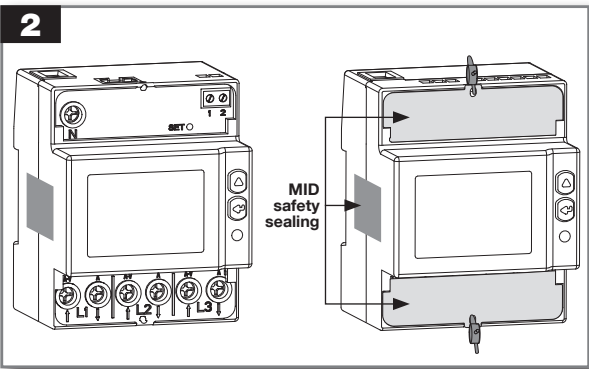

(*) For the installation in a cabinet at least with IP51 protection.