

QUICK START GUIDE











COUNTIS P14

CORPORATE HQ CONTACT: SOCOMECSAS, 1-4 RUE DE WESTHOUSE, 67235 BENFELD, FRANCE. © 2025, Socomec SAS. All rights reserved.



AFBEELDING/OBRÁZEK/KEP/RESIM/IMAGEN

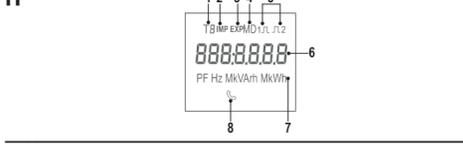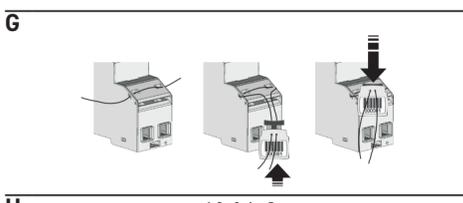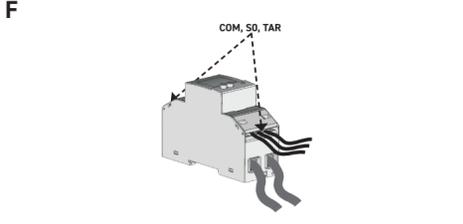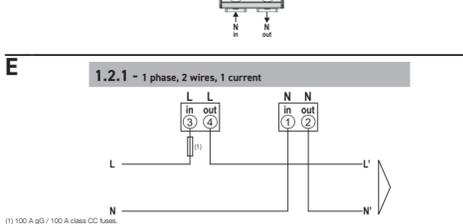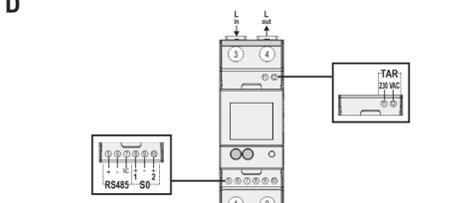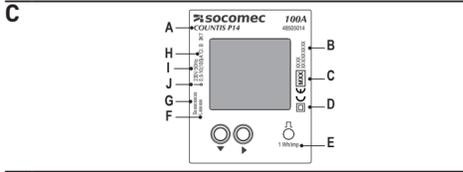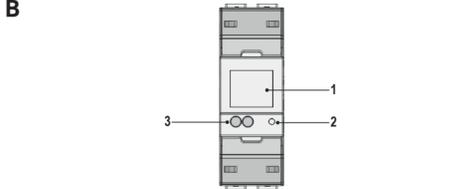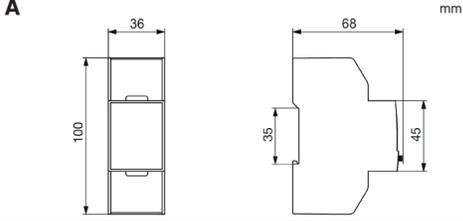

NL CS HU TR ES

Section for NL - MID 100A EENFASE ELEKTROMETER. Includes description of the device and its features.

Section for CS - JEDNOFÁZISŮV ELEKTROMĚR MID 100A. Includes description of the device and its features.

Section for HU - MID 100A EGYFÁZISŰ FOGYASZTÁSMÉRŐ. Includes description of the device and its features.

Section for TR - MID 100A TEZ FAZLI ENERJİ SAYACI. Includes description of the device and its features.

Section for ES - CONTADOR DE ENERGÍA MONOFÁSICA 100A MID. Includes description of the device and its features.

Section for RS485-POORT. Describes the RS485 port functionality and connection options.

Section for PORT RS485. Describes the RS485 port functionality and connection options.

Section for RS485 PORT. Describes the RS485 port functionality and connection options.

Section for RS485 PORT. Describes the RS485 port functionality and connection options.

Section for PUERTO RS485. Describes the RS485 port functionality and connection options.

Section for SO-UITGANGEN. Describes the SO output functionality and connection options.

Section for VÝSTUPY SO. Describes the SO output functionality and connection options.

Section for SO KIMENETEK. Describes the SO output functionality and connection options.

Section for SO ÇIKIŞLARI. Describes the SO output functionality and connection options.

Section for SALIDAS SO. Describes the SO output functionality and connection options.

Section for TARIETELLERS. Describes the tariff meter functionality and connection options.

Section for TARIFNI ČITÁČE. Describes the tariff meter functionality and connection options.

Section for TARIFAZÁMLÁLÓK. Describes the tariff meter functionality and connection options.

Section for TARIFE SAYACI. Describes the tariff meter functionality and connection options.

Section for CONTADOR TARIFA. Describes the tariff meter functionality and connection options.

Section for BEDRADINGSSCHEMA'S. Describes the wiring diagram and safety instructions.

Section for ELEKTRICKÁ SCHÉMATA. Describes the wiring diagram and safety instructions.

Section for KAPCSOLÁSI RAJZOK. Describes the wiring diagram and safety instructions.

Section for KABLO TESİSAT DİYAGRAMLARI. Describes the wiring diagram and safety instructions.

Section for ESQUEMAS DE CONEXIÓN. Describes the wiring diagram and safety instructions.

Section for AANSLUITDETAILS. Describes the connection details and safety instructions.

Section for DETAIL ZAPOJENÍ. Describes the connection details and safety instructions.

Section for CSATLAKOZÁSI RÉSZLETEK. Describes the connection details and safety instructions.

Section for BAĞLANTI DETAYI. Describes the connection details and safety instructions.

Section for CONNECTION DETAIL. Describes the connection details and safety instructions.

Section for SABOTAGEBESTENDIGE AFDICHTING. Describes the sabotage-resistant sealing and safety instructions.

Section for PLOMBOVÁNÍ PROTI NEOPRÁVNĚNĚ MANIPULACI. Describes the tamper-proofing and safety instructions.

Section for HAMISÍTÁSBIZTOS PLOMBA. Describes the tamper-proofing and safety instructions.

Section for KURCALAMAYA KARŞI KORUMA MÜHRÜ. Describes the tamper-proofing and safety instructions.

Section for SELLADO A PRUEBA DE MANIPULACIÓN. Describes the tamper-proofing and safety instructions.

Section for SYMBOLEN OP HET SCHERM. Describes the symbols on the display and their meanings.

Section for SYMBOLY NA DISPLEJI. Describes the symbols on the display and their meanings.

Section for MEGJELENŐ SZIMBOLUMOK. Describes the symbols on the display and their meanings.

Section for EKRAKANDKI SEMBOLLER. Describes the symbols on the display and their meanings.

Section for SÍMBOLOS EN PANTALLA. Describes the symbols on the display and their meanings.

Section for PARAMETERS OP HET SCHERM. Table listing parameters shown on the display.

Section for PARAMETRY NA DISPLEJI. Table listing parameters shown on the display.

Section for MEGJELENŐ PARAMÉTEREK. Table listing parameters shown on the display.

Section for EKRAKANDKI PARAMETRELER. Table listing parameters shown on the display.

Section for PARÁMETROS EN PANTALLA. Table listing parameters shown on the display.

Table with 5 columns: PARAMETER, REAL-TIME WAARDEN, TOTALTALLENS, TARIETELLERS, DEETELLERS, SO-UITGANGEN.

Table with 5 columns: PARAMETR, HODNOTY V REÁLNÉM ČASE, CELKOVÉ ČÍTAČE, TARIFNI ČÍTAČE, DÍLČÍ ČÍTAČE, VÝSTUPY SO.

Table with 5 columns: PARAMÉTER, VALÓS IDEJELŐ ÉRTÉK, ÖSSZESEN BÉRELTÉK, TARIFAZÁMLÁLÓK, RÉSZLETSZÁMLÁLÓK, SO KIMENETEK.

Table with 5 columns: PARAMETRE, GEREK ZAMANU DEĞERLER, TOPLAM SAYACLAR, TARIFE SAYACLARI, MİHİR SAYACLARI, SO ÇIKIŞLARI.

Table with 5 columns: PARÁMETRO, VALORES INSTANTÁNEOS, CONTADORES TOTALES, CONTADORES PARCIALES, SALIDAS SO.

