



Minium 90°C wire required. Warning: To reduce risk of electric shock, always open or disconnect circuit from power-distribution system (or service) of building before installing or servicing current transformers.


Warning: To reduce risk of electric shock, always open or disconnect circuit from power-distribution system (or service) before opening Split Core current transformers. The current sensors may not be installed in a panel where they

exceed 75% of the wiring space of any cross-sectional area within the panel. Restrict installation of current transformer in an area of breaker arc venting. Not suitable for Class 2 wiring methods and Not intended for connection

to Class 2 equipment. Secure current transformer and route conductors so that the conductors do not directly contact live terminals or bus. Wiring of the current transformers shall be maintained within the same end-product

enclosure. Sensors must be enclosed in an NRTL certified electrical/fire enclosure, listed Industrial Control Panel Equipment, or similar equipment.


Only TE-18 and adapter 5A current transformers are UL 61010-1, UL 61010-2-030, E257746 compliant. Intended use/location: indoor Measurement category: III.

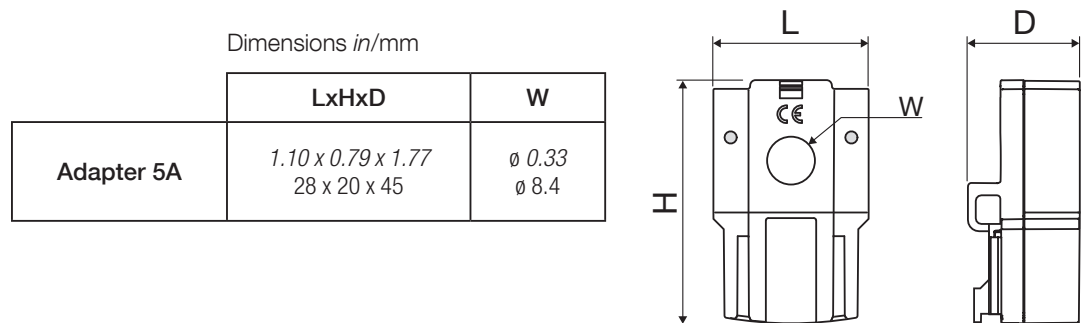


1




Do not apply around or remove from UNINSULATED HAZARDOUS LIVE conductors, which may render electric shock, electric burn, or arc flash.

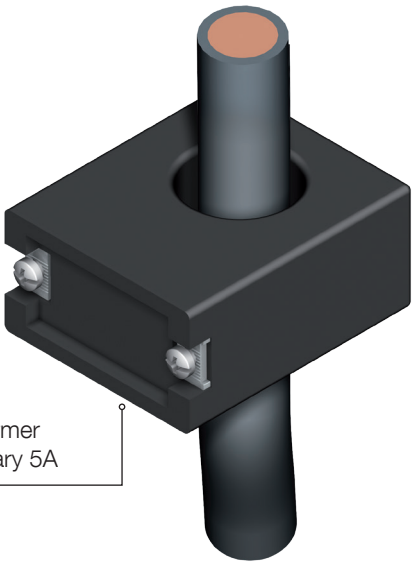


Current Transformer secondary 5A

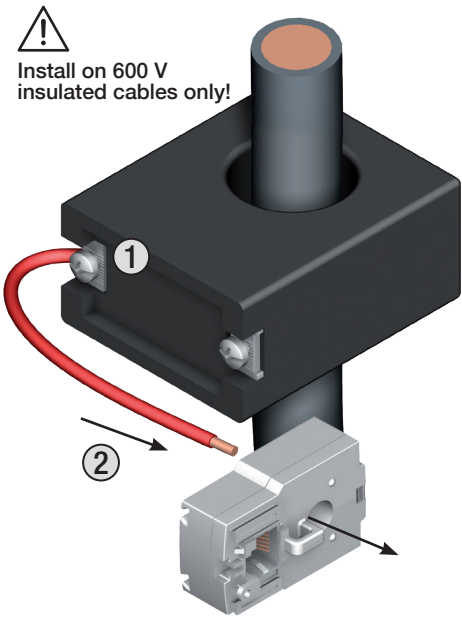

Install on 600 V insulated cables only!

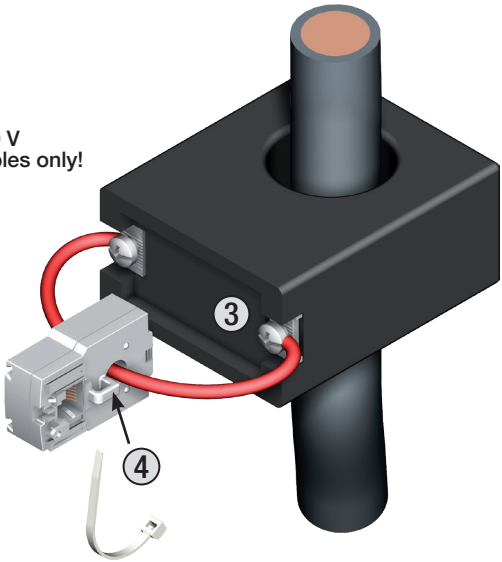

Install on 600 V insulated cables only!

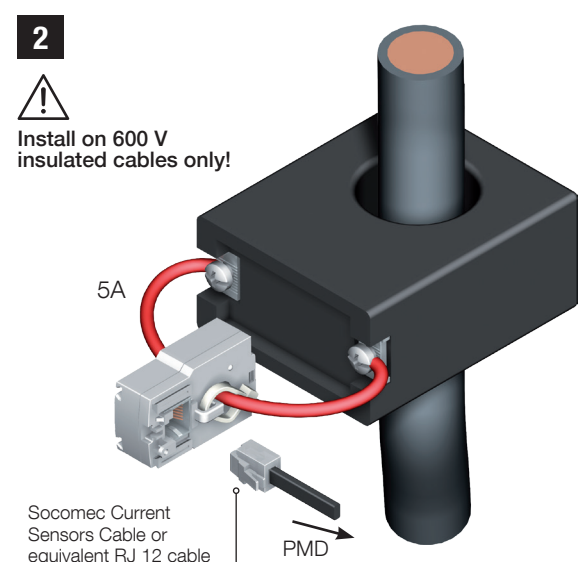

Install on 600 V insulated cables only!