

⚠ DANGER / DANGER

HAZARDOUS VOLTAGE

- This equipment must be installed and serviced only by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Replace all devices, doors, and covers before turning on power to this equipment.


Failure to follow these instructions will result in death or serious injury.

TENSION DANGEREUSE

- L'installation et l'entretien de cet appareil ne doivent être effectués que par du personnel qualifié.
- Coupez l'alimentation de cet appareil avant d'y travailler.
- Utilisez toujours un dispositif de détection de tension à valeur nominale approprié pour confirmer que toute alimentation est coupée.
- Remplacez tous les dispositifs, les portes et les couvercles avant de mettre cet appareil sous tension.

Si ces précautions ne sont pas respectées, cela entraînera la mort ou des blessures graves

Dual dimensions in/mm
Double dimensions in/mm

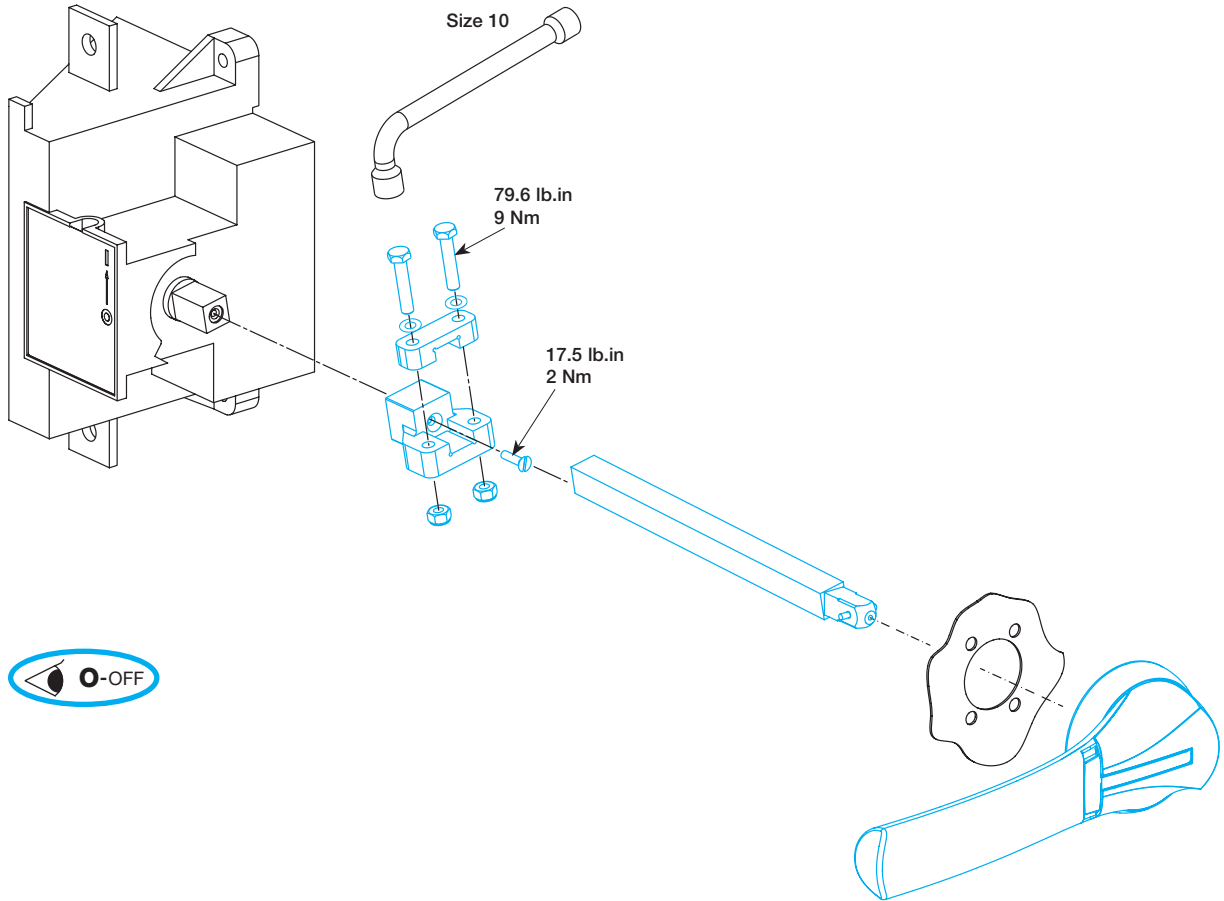






Mounting orientation
Sens de montage

SIDERMAT / FUSOMAT



**CURRENT RELEASE COIL
BOBINE A EMISSION DE COURANT**

**UNDERVOLTAGE COIL
BOBINE A MANQUE DE TENSION**

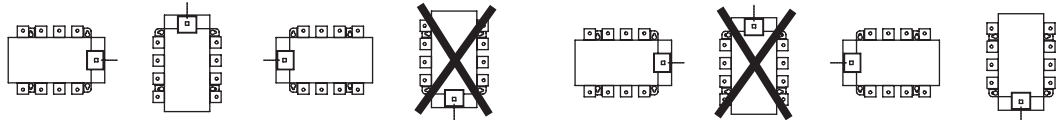

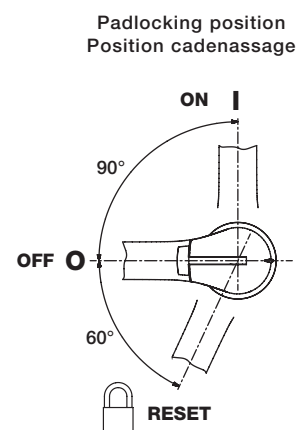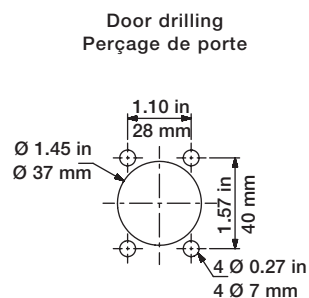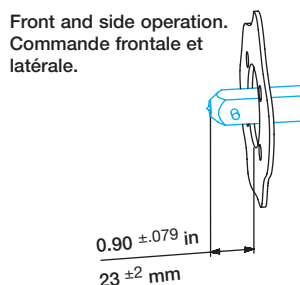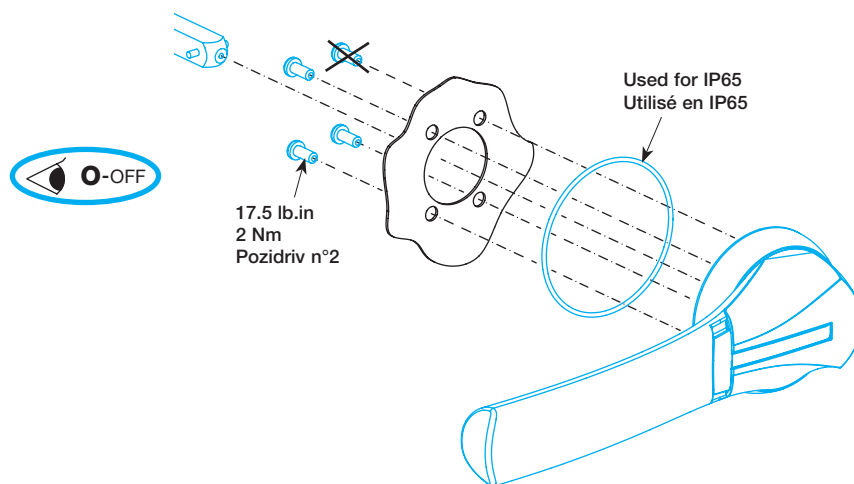

Padlocking the handle - Front operation Cadenassage de la poignée - Commande frontale

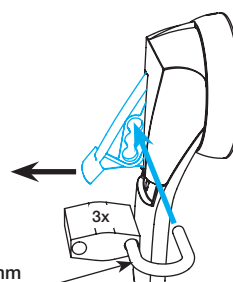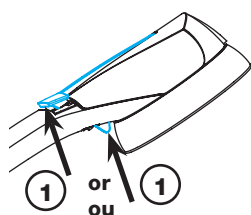

Shaft length Longueur d'axe

