TF sensors

Flexible current sensors

used with DIRIS Digiware I, DIRIS A-40, DIRIS B, and ISOM Digiware F-60



TF Flexible current sensors

Function

TF flexible **current sensors** measure the load currents of an electrical circuit and send the data to meters and Power Monitoring Devices or current modules via an RJ12 plug-and-play connection. Thanks to a wide measurement range, TF current sensors cover a wide current range from 100 to 6000 A, with only 7 references. TF flexible current sensors can be used with DIRIS Digiware I modules, DIRIS A-40, DIRIS B and ISOM Digiware F-60.

Advantages

Plug & Play

- A rapid RJ12 connection makes wiring easy and reliable and prevents wiring errors.
 This also allows automatic detection of the sensor type and rating.
- The sensors can be installed in both directions.

Accuracy according to IEC 61557-12

- Class 0.5 for the global measuring chain (PMD + TF current sensors) from 2 to 120% of the nominal current I_n.
- Accuracy is guaranteed regardless of the position of the conductor in the loop.

Safe locking mechanism(1)

 The locking system prevents the loop from opening, guaranteeing continuous functioning and accuracy even under harsh conditions.

Installation

 The TF flexible sensor range is specially designed for existing installations with strict integration constraints or with high-intensity currents.

Simplified installation

- The Rogowski integrator is directly integrated to the RJ12 cable enabling a quick and compact integration (no DIN rail assembly required) inside electrical panels.
- The integrator is self supplied by the PMD through the RJ12 cable and does not need any external power supply.

The solution for

- > Industry
- > Building
- > Infrastructure
- > Data centers



Strong points

- > Plug & Play
- Accuracy according to IEC 61557-12
- > Safe locking mechanism
- > Installation
- > Simplified installation

Integrated technologies



PreciSense

For more information see our website www.socomec.com

Compliance with standards

> IEC 61557-12



> ISO 14025



> UL




Installation

Cable mounting



Bar mounting

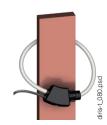


Create your project

Find the best DIRIS Digiware configuration: www.meter-selector.com





Dimensions (mm)

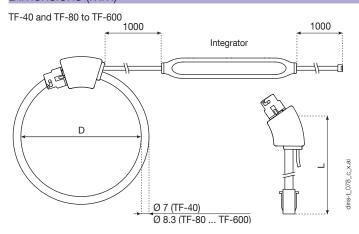

| Model | Nominal current range (A) | Real range covered (A) | D = Ø loop (mm) | L = Loop length (mm) | | | |
|---|---------------------------|------------------------|-----------------|----------------------|--|--|--|
| TF-40 | 100 400 | 2 480 | 40 | 126 | | | |
| TF-80 | 150 600 | 3 720 | 80 | 251 | | | |
| TF-120 | 400 2000 | 8 2400 | 120 | 377 | | | |
| TF-200 | 600 4000 | 12 4800 | 200 | 628 | | | |
| TF-300 | 1600 6000 | 32 7200 | 300 | 942 | | | |
| TF-600 | 1600 6000 | 32 7200 | 600 | 1885 | | | |
| Integrator dimensions: 128 x 19 x 15 mm | | | | | | | |

Technical characteristics

| Model | TF-40 | TF-80 | TF-120 | TF-200 | TF-300 | TF-600 | | |
|------------------------------|--|---------|----------|----------|-----------|-----------|--|--|
| Nominal current range In (A) | 100 400 | 150 600 | 500 2000 | 600 4000 | 1600 6000 | 1600 6000 | | |
| Real range covered (A) | 2 480 | 3 720 | 8 2400 | 12 4800 | 32 7200 | 32 7200 | | |
| Weight (g) | 114 | 130 | 142 | 164 | 193 | 274 | | |
| Max. voltage | 1000 V (Ph/N) | | | | | | | |
| Rated withstand voltage | 3.6 kV | | | | | | | |
| Accuracy class | 0.5 in association with DIRIS Digiware I, DIRIS A-40, DIRIS B based on IEC 61557-12 | | | | | | | |
| Frequency | 50 / 60 Hz | | | | | | | |
| Intermittent overload | 10 x In for 1 s | | | | | | | |
| Measurement category | 1000V CAT III / 600V CAT IV | | | | | | | |
| Protection degree | IP30 / IK07 | | | | | | | |
| Operating temperature | -10 to +70°C | | | | | | | |
| Storage temperature | -25 to +85°C | | | | | | | |
| Relative humidity | 95% RH non-condensing | | | | | | | |
| Altitude | < 2000 m | | | | | | | |
| Connection | Socomec cable or equivalent RJ12 straight, twisted pair, unshielded, 600 V, -10 +70 °C | | | | | | | |

References

| Model | Nominal current range (A) | Real range covered (A) D = Ø loop (mm) | | L = Loop length (mm) | Reference | | |
|--|---------------------------|--|-----|----------------------|------------------|--|--|
| TF-40 | 100 400 | 2 480 | 40 | 126 | 4829 0573 | | |
| TF-80 | 150 600 | 3 720 | 80 | 251 | 4829 0574 | | |
| TF-120 | 400 2000 | 8 2400 | 120 | 377 | 4829 0575 | | |
| TF-200 | 600 4000 | 12 4800 | 200 | 628 | 4829 0576 | | |
| TF-300 1600 6000 32 7200 300 942 | | | | | | | |
| TF-600 | 1600 6000 | 32 7200 | 600 | 1885 | 4829 0578 | | |
| Accessories | | | | | | | |
| Female/female connector for extension of the R.I.12 connection between PMD and TF sensor | | | | | | | |

| 1 officio/forficio confinocto | i ioi oxtoriolori | 01 1110 1 10 12 00 | A II IOOLIOI I DOLVI | OOTT WID and | 11 0011001 | |
|-------------------------------|-------------------|--------------------|----------------------|--------------|------------|-------|
| | | | | | | |
| | | | | | Cable | e ler |
| R I12 connection | | | | | | |

| | Cable length (m) | | | | | | | | | |
|------------------------|------------------|------------------|------------------|------------------|------------------|------------------|------------------|------------------|------------------|---------------------------------|
| RJ12 connection cables | 0.1 | 0.2 | 0.3 | 0.5 | 1 | 2 | 3 | 5 | 10 | 50 m reel + 100 connectors |
| Number of cables | Reference |
| 1 | - | - | - | - | - | - | - | 4829 0602 | 4829 0603 | 4829 0601 ⁽¹⁾ |
| 3 | 4829 0580 | 4829 0581 | 4829 0582 | 4829 0595 | 4829 0583 | 4829 0584 | 4829 0606 | - | - | - |
| 4 | - | - | - | 4829 0596 | 4829 0588 | 4829 0589 | - | - | - | - |
| 6 | 4829 0590 | 4829 0591 | 4829 0592 | 4829 0597 | 4829 0593 | 4829 0594 | - | - | - | - |

⁽¹⁾ The maximal length between the sensor and the current module = 10m.